


Installation Instructions for Waterproof Wood

Floor Prep Required, see next page for more information


HardWood + Laminate + Waterproof Wood Core = Waterproof Wood™

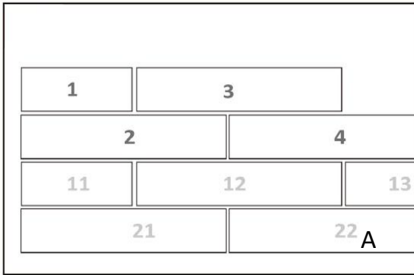

A. Products should be staggered in brick laid pattern, stagger equal to half of a plank for the first 2 rows, and then at least 18" for the following rows. Spacers should be placed against walls to maintain proper distance (1/4" - 1/2"). Tools needed: planks, underlayment, spacers

B. The first row must be installed straight. Begin installation back and forth between rows one and two for the first two rows only. Start small plank positioned close to the wall, angle a long plank into the long side of the short plank, and drop long plank tongue into lock. Make sure there are no gaps.

C. Take another long plank, repeat the previous step, insert the long side of plank into long side of previous plank. Then slide plank to your left until the short side is in contact with the short side of the first laid plank.

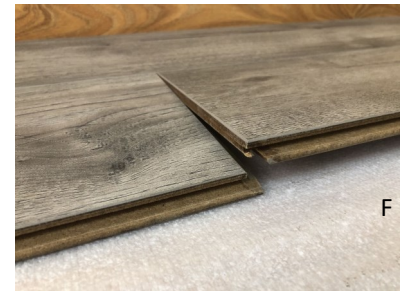

D. Using the drop lock system, drop the short side of the last long plank into the short side of the first laid plank. Slightly tap on the top of the joint of the short side with your fist to secure.

E and F. Finishing rows 1 and 2— continue alternating planks on rows 1 and 2 to avoid misalignment. From row 3 onwards, installation does not require alternating rows. Install one row after the other by starting with angling on the long side, sliding until the short sides are in contact and then locking the short side. As you go, ensure the short sides are securely locked by tapping with your fist, or if need be, a rubber mallet.



G. Remove spacers and cover gaps with a trim.